82510.fm Page 3 Friday, September 17, 2004 10:06 AM

Bauknecht is a registered trademark

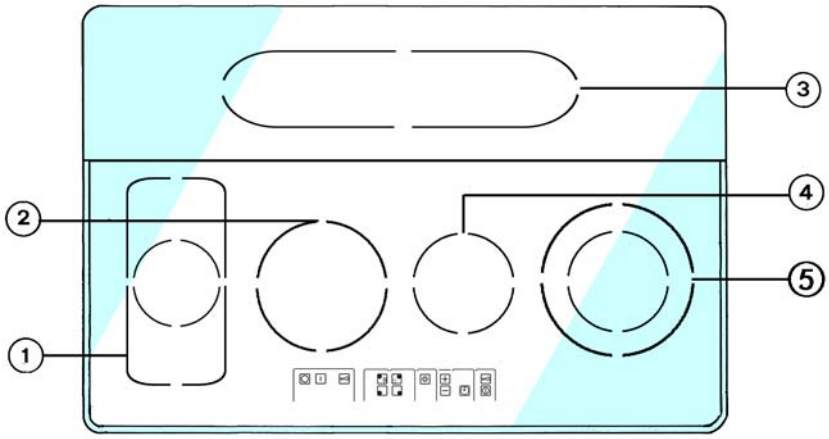

1. Outside left rectangular double Sprintstar hotplate Ø 245x 145 mm, 1000/1800 W, 230 V
2. Inside left round Sprintstar hotplate Ø 180 mm, 1800 W, 230 V
3. 80 W, 230 V food-warmer zone (heatable zone under the stainless steel surface)
4. Inside right round Sprintstar hotplate Ø 145 mm, 1200 W, 230 V
5. Outside right round double Sprintstar hotplate Ø 145/210 mm, 1000/2100 W, 230 V

DIMENSIONS OF THE HOB

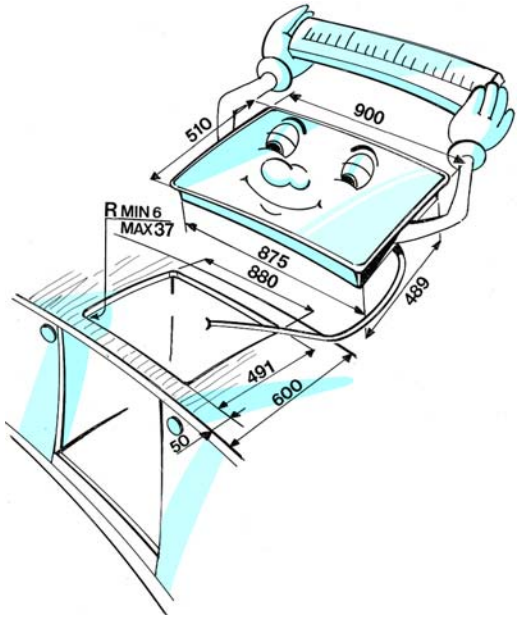

82510.fm Page 4 Friday, September 17, 2004 10:06 AM

USE OF THE HOB

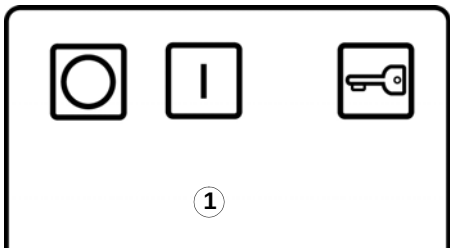

Operation of the food-warmer zone

Press the button in section **1** with the key symbol; a red pilot light will appear above it to warn that the food warmer can be switched on.
Then press the central button to switch the food warmer on; a red pilot light will appear above the button.
Press the left button to switch the food warmer off.

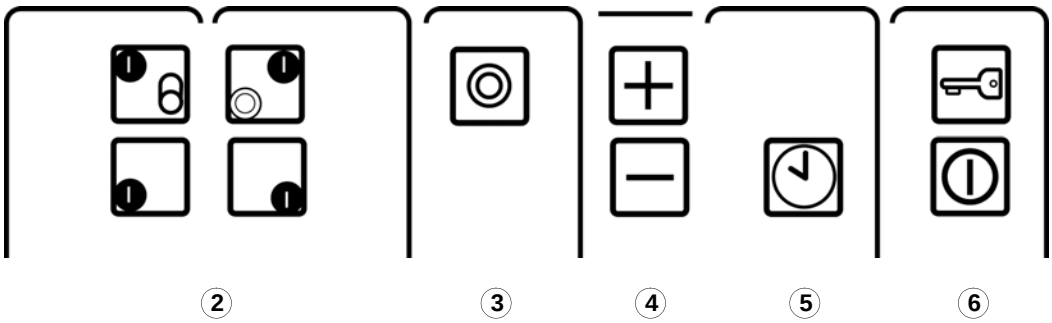

Operating of the cooking zones

Press the front button of Section **6** to switch the hob on.
In section **2** select and press the button for the cooking zone to be used.
Then press the **+/-** buttons in section **4** to select the temperature required (9 is the maximum position and 1 the minimum). To use both circuits of the double cooking zones (outer left rectangular hotplate and outer right round hotplate) select and press the cooking zone required as usual and then press the double zone button, in section **3**.
The booster can be used to reach the temperature required more quickly. Select the cooking zone required as usual, use the **+** button to select the maximum power position 9, press button **+** again so that the letter **A** appears. This will alternate with the number 9.
At this point the final cooking position required (normal cooking 5/6) can be set by means of the **-** button.
The booster will continue to flash for the time needed to reach the temperature chosen as quickly as possible; once this is reached the display stops flashing and the cooking temperature stays on the position chosen.
The timer can be switched on to select the cooking time; after selecting and pressing the button for the cooking zone chosen, press the Timer button in section **5** to switch it on. Use the +/- buttons to set the cooking time (from 1 to 99 minutes). When the preset cooking time has passed, the Timer will automatically switch the switched-on cooking zone off and as a confirmation a buzzer will sound for a few seconds.

Total Chlorine Free